

DOC.2

INSTRUCTIONS FOR TREATING MOULD AND MILDEW USING **TECcare** IN **OCCUPIED** PROPERTIES

- TECcare Control is proven to clean, disinfect and deodorize surfaces and air by killing odour causing microorganisms and mould and mildew.
- TECcare CONTROL will effectively inhibit the growth of mold and mildew (*Aspergillus niger*) and the odors caused by them when applied to surfaces leaving bathrooms and kitchens clean and fresh smelling.

The Products Is:


- Non toxic
- Non alcohol
- Asthma & Allergy approved*
- Biodegradable packaging
- Approved testing
- Non tainting
- Natural-based

*TECcare® Control and Protect are Asthma and Allergy accredited.

Kit List:

- PPE Requirements

For all support
queries, call Purozo
on 01594 546250

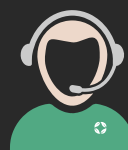



STEP 1 Inspect the property for mould and mildew.



STEP 2 Ventilate by opening windows in the room with mould. Ensure curtains are open.



STEP 3 Ask the occupants to leave the room.




STEP 4 Move furniture away from walls.



STEP 5

Spray directly onto the areas of mould from 6 inches ensuring the surface is wet.

NOTE - Before exiting the room, go to the furthest point from the door and spray the air, walking backwards out of the room.

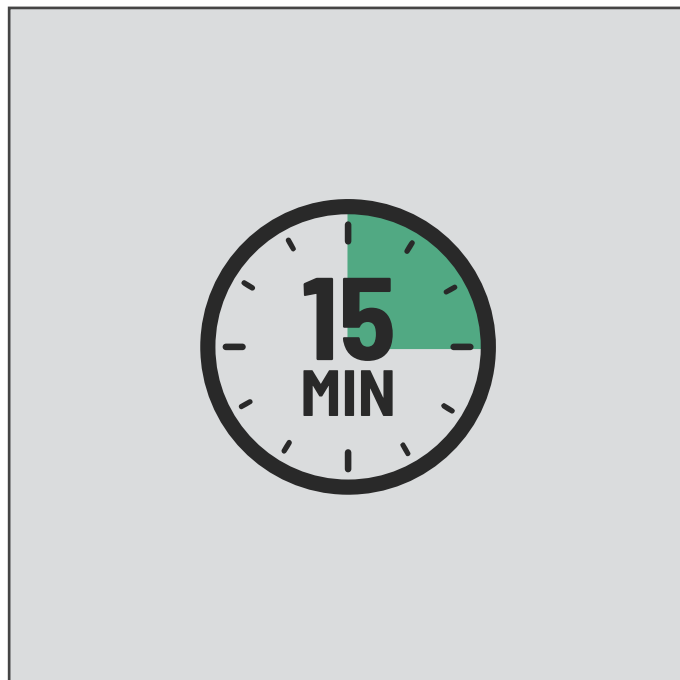

STEP 6

Wait 15 minutes.



STEP 7

Wipe off the mould with Efface Wipes and dispose of the wipes in a bin liner.



STEP 8

Advise occupants of ways they can assist with suppressing mould, handing them the VIVO leaflet.