

DOC.3

INSTRUCTIONS FOR ADDING **TECcare** CONTROL TO PAINT

- TECcare CONTROL is proven to clean, disinfect and deodorize surfaces and air by killing odour causing micro-organisms and mould and mildew.
- TECcare CONTROL will effectively inhibit the growth of mould and mildew (*Aspergillus niger*) and the odours caused by them when applied to surfaces leaving bathrooms and kitchens clean and fresh smelling.

The Products Is:


- Non toxic
- Non alcohol
- Asthma & Allergy approved*
- Biodegradable packaging
- Approved testing
- Non tainting
- Natural-based

*TECcare® Control and Protect are Asthma and Allergy accredited.

Kit List:

- PPE Requirements
- Disposable Gloves

For all support
queries, call Purozo
on 01594 546250

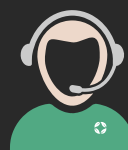



STEP 1

Unscrew the green cap on the bottle of TECcare CONTROL. Do not use the red cap.



STEP 2

Fill the entire chamber by squeezing the bottle.



STEP 3

Add one full chamber per litre of paint.



STEP 4

Stir well for 30 seconds.



STEP 5 Use the paint within 30 days.

For all support
queries, call Purozo
on 01594 546250

